

Behringer
Transfer Plate
BEHF205TP



Housing Size range: Transition a stacking assembly from Group 6 to 3, Group 7 to 3, or Group 7 to 6.

Hardware Material: 304 Stainless, others upon request.

Installation: Replace Cover Plate (COP) on lower assembly with Transfer Plate (TRP). Assemble upper assembly by utilizing TRP as base hardware.

Contact Us: **973-948-0226** or **www.behringersystems.com**